



NARROW FLUSHBOLT™

FITTING INSTRUCTIONS

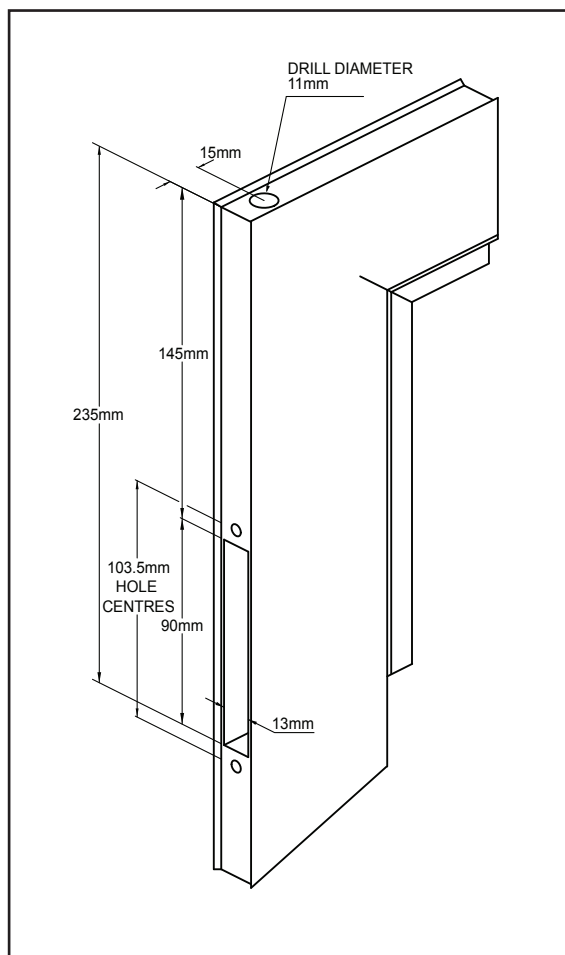

1. Drill and cut out door stile to dimensions given.
2. Assemble lock body into cut out and fix in position note using self tapping screw. Ensure tip of screw does not foul against the operating mechanism.
3. Operate bolt lever to lock position.
4. Remove lock nut from bolt and discard. Apply small amount of locktite/superglue to threaded end of bolt. Carefully locate in hole and screw firmly into position.
5. Mark position of bolt hole in jamb and drill diameter 13.0 x 20.0mm deep hole.

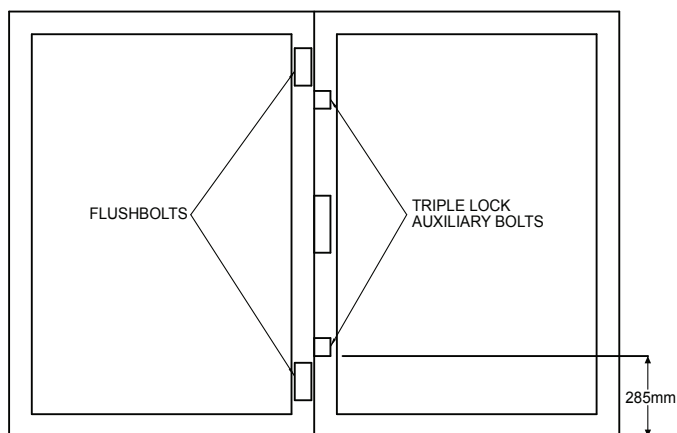

NOTE: When manufacturing double hinged or sliding doors ensure auxiliary cut outs are minimum 285mm from top and bottom of locking stile so as not to clash with flushbolts.